 



# Installation Information

## Zebra Blind

### Parts Included



 Bracket  
Qty: 2, 3, 4\*



Child Safety Device  
Qty: 1



Installation  
Screws  
Qty: 4, 6, 8\*



Child Safety  
Screw  
Qty: 1

\* The quantity of brackets and screws supplied will vary depending on the width of the blind


### Important Notes

 - Please check that all parts have been supplied before you begin to assemble your new Zebra Blind
- Do not operate the blind until it is fully installed
- The finished blind width is from the end of the left hand side of the head rail to the end of the right hand side of the head rail
- Ensure that the blind is mounted level for correct operation

### Positioning Blind

As per your order, determine the correct fitting location of mounting brackets and mark where you are going to install the brackets.

- i) Inside the window frame (Inside Mount) or;
- ii) On the window frame or wall (Outside Mount)

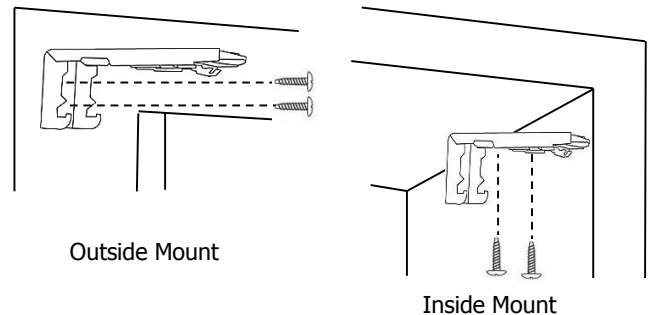

### Installing Mounting Brackets

- i) The brackets should be installed approximately 100mm in from each end of the head rail
- ii) Place the bracket (part A) in the desired location, as per your order i.e. on the LHS or RHS, mark and if necessary pre drill 2 holes. After drilling the holes, secure the bracket with screws (part C). (Timber screws have been provided, however screws suitable for gyprock or brick walls may need to be purchased)
- iii) Repeat this process for the second bracket (part A)

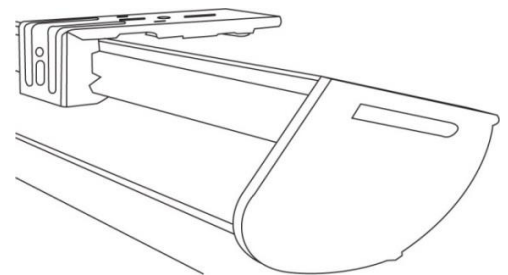 


Figure 1

### Attaching Blind to Brackets

- i) Align the back of the headrail with the bottom hooks on the bracket (Figure 1)
- ii) Lift the front of the headrail so that the clips on the front of the head rail lock into place (Figure 2)
- iii) To release, press the clear plastic release button on the front of each bracket and lower the front of the headrail

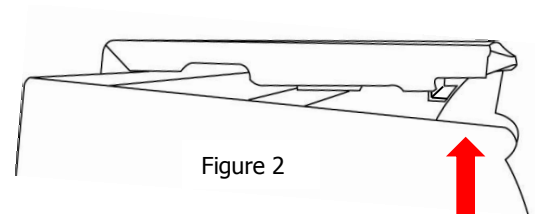 


Figure 2

### Operating the Blind

Using the cord/chain, draw the blind up and down several times to ensure the blind operates correctly.

### Attaching Child Safety Device (For more safety information, please see over page)

Secure the child safety device (part B) to the wall beside the blind, ensuring the cord/chain is not too tight, as this may restrict smooth operation.

# Installation Information

 
## Zebra Blind Safety Information

### Child Safety Instructions

*For Blinds With Chain/Cord Control*

#### Warning

- The chain/cord tension device must be fitted to ensure child safety
- The chain tension device is to be positioned at the bottom of the chain/cord loop
- It can be fitted to the inside of the reveal (frame) or in front of the reveal (frame)



Child Safety Device

#### Fitting Instructions

1. Position the tension device at the bottom of the chain/cord loop (Figure 1)
2. Install the tension device onto the reveal/frame using child safety screw (part D), making sure that the loop chain/cord hangs with minimal tension (Figure 2)

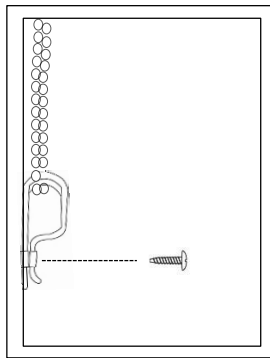 


Figure 1

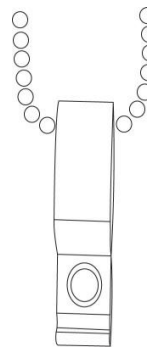 


Figure 2



### **WARNING – ALL WINDOW COVERINGS WITH CORD OR CHAIN**

To avoid creating a possible strangulation hazard for children, the corded or chained internal window covering must be installed in such a way that a loose cord or chain cannot form a loop 220mm or longer at a height of less than 1600mm above floor level.

- A cord/chain guide may be installed lower than 1600mm above floor level if the cord/chain is sufficiently secured or tensioned to prevent a loop 220mm or longer being formed
- If a cord/chain guide is installed lower than 1600mm above floor level, it must be designed to prevent a child from being able to remove the cord/chain
- If a cleat is used to secure the cord, it must be at least 1600mm above floor level because a child is capable of unwinding a cord from a cleat