

# Measuring Guidelines

## Venetian Blinds

### Single Venetian Blinds

#### Inside Mount

It is industry standard for a blind fitting into a window reveal to sit flush with the front of the reveal. The factory will make the appropriate deductions for the product type and fixing position.

Check that the reveal is deep enough to fit the Venetian Blind. Refer to the headrail information in the specifications. The depth required will vary with each different headrail size. Ensure there are no protruding window handles/locks etc. that will interfere with the operation of the slats.


Advise client if window reveal is out of square as this can cause irregular light down sides of blind and/or across base of blind. The blind can only be made square. The drop of the blind in the closed position will be your full drop measurement.

#### *Width*

- Measure neat internal width of reveal
- Measure at three width points – top, middle and base of reveal. Use the smallest width measurement

#### *Drop*

- Measure neat internal drop of reveal. Measure at three drop points – left, middle and right of reveal. Use the shortest drop measurement

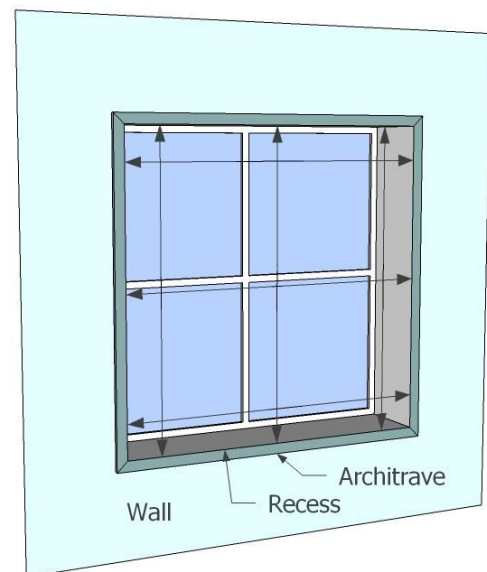

#### Outside Mount

Blind Fitting onto Architrave

#### *Width*

- Measure from outside edge of architrave to outside edge of opposite architrave at three points – top, middle and base
- Use the largest width measurement

#### *Drop*

- Measure from top of architrave to base of lower architrave or floor. Measure at three drop points
- If blind is finishing at base of architrave, use longest drop measurement. If blind is going to floor, use shortest drop measurement

